

Dante Firmware Update (Ferrofisch A32 Dante and Verto-Series)

1. Download the installer for the „Dante Firmware Update Manager“ from the Audinate Homepage
(<https://www.audinate.com/search/node/firmware%20update%20manager>) and install it.
2. Start the Dante Update Manager program. Windows will ask, if system changes shall be allowed (the program wants to start a tftp server process). Confirm the the question.
3. Choose the network, which you A32 Dante is connected to
→ click „Next“
4. Choose button „Update Dante Firmware“.
5. Then choose the firmware file, you want to install
f.e. : Verto-FW-full-dnt or A32-FW-full-dnt
6. Confirm a possible firewall popup bestatigen:
allow all connections (public and private) to be on the safe side.
7. The following window will show all Dante devices found in your network. Shouldn't that happens, use the refresh button, as well for devices switched on after the windows has opened.
8. Check the devices, you want to update.
→ click Start (confirm action 2 times).
9. The column „Status“ of the devices chosen will show in that order:
„Get File“ / „Flashing“ / „Done“.
This can take several minutes.
10. Switch the devices off and on again.
11. A32 Dante devices will be ready for service directly after that, Verto devices will perform a second reboot after approx. 10-20sec automaticely.

The upgrade is done!